



# Dell Inspiron 5100 PP07L RAM Replacement

If you want to change your RAM.

Written By: May Chauvin





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — RAM



- Flip to the back side of the laptop

## Step 2



- Loosen one screw.
- ⓘ This screw is attached to the panel and cannot be removed.



## Step 3



- Spread out pins on the opposite sides. The chip will spring up at an angle.
- Place new chip in at a 30 degree angle.
- Push inward until pins can't be seen.
- Push RAM down, so it lays flat.

 Improperly replacing the RAM will cause it to short-circuit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 10:53:54 PM.